HOW TO ASSEMBLE MOTOR




STEP1.

Take out filter cover and air diffuser. And open the wire cover.




STEP 3.

Screw the bolts into motor mount holes.

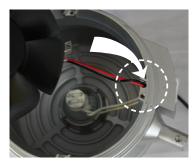

STEP 2.

Mount new motor by inserting red and black wires through the wire hole first.

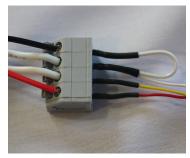

STEP 4. CONNECT WIRES:

Connect Black wire from motor into the top hole (White wire) by pressing corresponding button.

Connect Red wire from motor into the bottom hole (Red wire) by pressing corresponding button.





STEP 5.

Close the wire cover. And close air diffuser and filter cover.



mail@4nails.us 4nails.us